





PRODUCT INFORMATION BULLETIN

Date: September 22, 2011
Number: 2987
Division: Genie®
Product Family: Accessories Residential Openers
Product Series: Wireless Keyless Entry Pad, Model GK-BX, Part # 37224R
To: All Genie Professional Line Wholesalers, Dealers and Installers
Re: Instructions Update for Keyless Entry Pad, Model GK-BX, Part# 37224R

Please note, the original set of instructions released with these keypads mid-June 2011 (part# 37256500131) did not contain the notation regarding the use of Intellicode® 2 keypads with the Intellicode 1 openers. In mid-July 2011, this excerpt was included into the revised instructions (part# 37256501192) and could be seen in product shortly thereafter.

To Operate Intellicode® 1 Openers:

This Wireless Keypad comes from the factory as an Intellicode® 2 unit. In order to initially program an opener or openers which are Intellicode® 1, you must switch the Keypad to Intellicode® 1 mode.

- After entering your PIN, Press .
- Press and hold  for two seconds and the GREEN LED above the number keys will turn RED.
- Close the Keypad cover.
- Follow the instructions on this page for programming your Intellicode® 1 opener(s).

Once all your doors have been programmed, there is no need to switch back and forth between Intellicode® modes. The Keypad will automatically remember the mode of each opener.