



PRODUCT INFORMATION BULLETIN

Date: January 30, 2015
Number: 8355
Division: Genie®
Product Family: Residential Openers
Product Series: Accessories
To: All Genie Professional Line Wholesalers, Dealers and Installers
Re: Redesign of the Series II Wall Console with Sure-Lock™ Slide Lock

There have been several improvements made to the Series II console including:

- Revised vacation lock switch to reduce accidental activations
- New quick reference programming card to aid customers with simple programming tasks
- Strengthened casing material to improve unit durability



Previously, the vacation lock was engaged by “push button” activation, allowing for accidental activation of the vacation lock feature. The “push button” has been exchanged for a new “Slide Lock” activation, requiring the engagement of this feature to be a more deliberate action.

In addition to the redesigned slide lock vacation switch and strengthened casing, a quick reference programming card has also been placed inside the console to aid your customers in the simple remote programming steps for Genie residential operators.

As a result of these changes, the part number for the current wall console has changed.



Original Part Number: 38066R
NEW Part Number: 39165R
NEW Model Number: GBWCSL2-BX
Description: Series II Wall Console with Sure-Lock Slide Lock



Programming Remotes:

1. For new remotes only, remove the protective strip for the battery.
2. Press and hold the square Program Set button on the powerhead. The round LED on the powerhead will turn blue.
3. Release the Program Set button. The long LED on the powerhead will flash purple.
4. Press and release your preferred button on the Remote. The long LED on the powerhead will turn purple.
5. Press and release the same button on the Remote. Both LED's on the powerhead flash blue and then turn off.
6. Press and release the same button on the Remote. The door should open or close.

Clear powerhead memory of all remotes and keypad programming:

1. Press and hold the Program Set button on the powerhead for two seconds. The round LED on the powerhead will turn on.
2. Release the Program Set button. The round LED on the powerhead will go off and the long LED will flash purple.
3. Simultaneously, press and hold both the up and down arrows on the powerhead. Both LED's flash blue and will then turn off.

If the program buttons on the powerhead do not look like the above image, please call 1-800-35Genie or visit www.GenieCompany.com for alternate instructions.

The new consoles replaced their counterpart in Models 3024/4024/3064/4064 units with the serial number prefix of 15012 and in the 2028 units with serial number prefix 15006. Accessory part numbers are currently available. There is no change to pricing or installation of the product.