

WARNING

A Moving Door can cause serious injury or death.

- 1 Keep people clear of opening while Door is moving.
- 2 Do Not allow children to play with Wireless Keypad.
- 3 Wall Control should be mounted within sight of door, at least 5 feet above floor and clear of moving parts.
- 4 During programming, the Door Opener could begin to run, so stay away from the moving Door and its parts. To keep the Door from moving, close the Door and disconnect it from the Opener by pulling the Emergency Release Cord.


 
If Safety Reverse does not work properly:

- 1 Close Door and disconnect the opener using Emergency Release Cord.
- 2 Do not use Door Opener, Remote, or Wireless Keypad.
- 3 Refer to Door and Door Opener Owner's Manuals before attempting any repairs.

INTELLICODE® 1 MODE of CODE TRANSMISSION

To Operate Intellicode® 1 Openers:

This Wireless Keypad comes from the factory as an Intellicode® 2 unit. In order to initially program an opener or openers which are Intellicode® 1, you must switch the Keypad to Intellicode® 1 mode.

- After entering your PIN, Press .
- Press and hold  for two seconds and the GREEN LED above the number keys will turn RED.
- Close the Keypad cover.
- Follow the Instructions on this page for programming your Intellicode® 1 opener(s).






Once all your doors have been programmed, there is no need to switch back and forth between Intellicode® modes. The Keypad will automatically remember the mode of each opener.

SECTION 1 BASIC PROGRAMMING FOR ONE DOOR INTELLICODE® OPENER

FOR CONVENIENCE

Program Keypad **BEFORE** mounting.

STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order   .
- Press .
- Enter your PIN (3 to 8 characters).
- Press .
- Close keypad cover and wait 30 seconds.




STEP 2: TEACHING PIN TO SINGLE OPENER

Find the Learn Code Button and Learn Code Indicator LED on your door opener.

- If your Door Opener has a black antenna wire and the serial number does not start with 10 or higher, the Learn Code Button and Indicator LED are located near the antenna. (The light lens may need to be opened. If you use an external receiver, it may need to be opened to access the Learn Code Button and Indicator LED.



- If your Door Opener does not have an Antenna, you have an External Receiver. The External Receiver cover must be removed to access the Learn Code Button and Indicator LED.

- Press the Learn Code Button.
 - Learn Code Indicator LED (on Opener) will blink.
- Enter your PIN and press  on Keypad.
 - Learn Code Indicator LED stays on.
- Press  again.
 - Learn Code Indicator LED turns off.
- Press  again.
 - Opener will run.

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING ONE DOOR OPENER

To open or close the Garage Door.

- Enter your PIN.
- Press .

NOTE

- If the Door does not move, check the red LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

For answers to questions, call 1-800-35-GENE, or visit www.geniecompany.com






The Genie Company, 22790 Lake Park Blvd., Alliance, Ohio 44601
Additional Genie® products can be ordered through your local Genie® Professional Dealer. To locate a dealer near you, call 1-800-OK-GENIE.

SECTION 2 PROGRAMMING FOR 2 OR 3 DOOR INTELLICODE® OPENER

FOR CONVENIENCE

Program Keypad **BEFORE** mounting.






STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order   .
- Press .
- Enter your PIN (3 to 8 characters).
- Press .
- Close keypad cover and wait 30 seconds.





 

STEP 2: PROGRAMMING MULTIPLE DOOR OPENERS

All Door Openers will use the same PIN.

On your keypad:

- Enter your PIN and press .
- Press  again.
- Press the number of Doors (total) you wish to control ( or ).
- Press .

Decide which Door will be Door #1, #2 and #3.





- Enter your PIN and press  on Keypad.
- Press the number you have picked for this Door Opener ( or  or ).
- Press and hold the  for 2 seconds.
- Press the Learn Code Button. (See Step 2 In Section 1.)
- Press  3 times.
 - Opener will run.

Repeat procedure below dotted line for each opener. (Each Door Opener must be programmed to receive the signal from the Wireless Keypad).

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING MULTIPLE DOOR OPENERS

To open or close a Door after programming is complete.

- Enter your PIN.
- Press .
- Press Door Opener number ( or  or ).

NOTE

- If the Door does not move, check the red LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.


SECTION 3 MOUNTING INSTRUCTIONS

The Keypad must be mounted in sight of the Door(s), at least 5 feet above the ground and clear of any moving Door parts.

A Mount Keypad. (Mounting screws located inside Battery Compartment.)

- Remove Battery Cover. (See Figure 3).
- Drill a 1/16" pilot hole for the top mounting screw.
- Install a screw into the drilled hole, leaving a 1/8" gap between the screw head and the wall. (See Figure 2.)
- Hook the Keypad over the screw.
- Mark and drill pilot hole and fasten bottom screw.
- Reinstall Battery Cover.

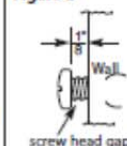Figure 2





SECTION 4 ADDITIONAL OPERATIONS

CHANGING YOUR PIN

- Enter your current PIN and press .
- Enter your NEW PIN and press .

USING A TEMPORARY PIN

A temporary PIN allows temporary access to your home by repair persons, meter readers, etc. if you so desire.




- Enter your current PIN and press  3 times.
- Enter your TEMPORARY PIN and press .

NOTE

- DO NOT reprogram the Door Opener(s).
- Temporary PIN remains active only until the next time your normal PIN is entered.

FORGOT YOUR PIN (RESETTING WIRELESS KEYPAD)

If you have forgotten your PIN or you fear it may have fallen into unauthorized hands, you must erase the old programming.

- Press and hold .
- While holding  press and hold  for 5 seconds.
- Release both buttons. You must now start from the beginning and reprogram your Wireless Keypad.

CHANGING BATTERY

- If the Keypad backlight does not come on, this indicates the need to replace the batteries.
- Press in on the front of the battery cover and slide it down off of the Keypad.
- Remove used batteries and replace with "AAA." Make sure the batteries are inserted properly using the polarity markings.
- No programming is lost during replacement of batteries.



Covers available in:
• Tan - P/N 372267
• Almond - P/N 372269
• Gray - P/N 372265
• White - P/N 372268